


# CASE IH 2162/2152/2142 NEW HOLLAND 86C/83C/82C DRAPER HEADS MACDON FD70/D60/D50 HEADS





Complete Sets			Skid Quantity Reference			
			A	B	C	D
Case IH	White	83490	1	4	1	Optional
New Holland	White	83490	1	4	1	Optional
MacDon	White	83490	1	4	1	Optional

**NOTE: Molded Cutterbar Skids not available at this time**





42061 (D)  
Center Skid Shoe  
7" X 19"  
(1) 3/8-16 x 5/8 Self Tap Bolt  
(2) 3/8-16 x 3/4 Carriage Bolt  
(2) 3/8-16 Flange Nut

42054 (A)  
Left End Skid Shoe  
11" X 15"  
(4) 5/16-18 x 3/4 Carriage Bolt  
(4) 5/16-18 Flange Nut

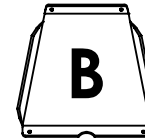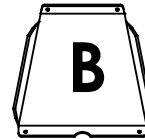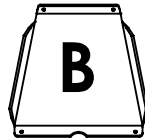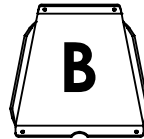

42055 (C)  
Right End Skid Shoe  
11" X 15"  
(4) 5/16-18 x 3/4 Carriage Bolt  
(4) 5/16-18 Flange Nut

42319  
Center Skid Shoe Assembly  
14" X 16"  
Includes: metal skid plate, poly skid shoe and mounting hardware (not sold in kits)

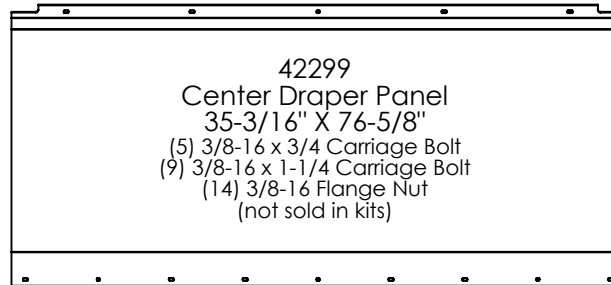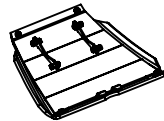

42299  
Center Draper Panel  
35-3/16" X 76-5/8"  
(5) 3/8-16 x 3/4 Carriage Bolt  
(9) 3/8-16 x 1-1/4 Carriage Bolt  
(14) 3/8-16 Flange Nut  
(not sold in kits)

42053 (B)  
Center Skid Shoe  
14" X 16"  
(4) 5/16-18 x 3/4 Carriage Bolt  
(4) 5/16-18 Flange Nut

MacDon CA20 Adapter



**MAY WES**  
*Original Poly People*  
A DIVISION OF PRIDE SOLUTIONS

120 Eastgate Drive SE  
PO Box 7  
Hutchinson, MN 55350

1-800-788-6483  
1-320-587-2322  
1-320-587-6112 (Fax)

[WWW.MAYWES.COM](http://WWW.MAYWES.COM)